


Fixture Diagram

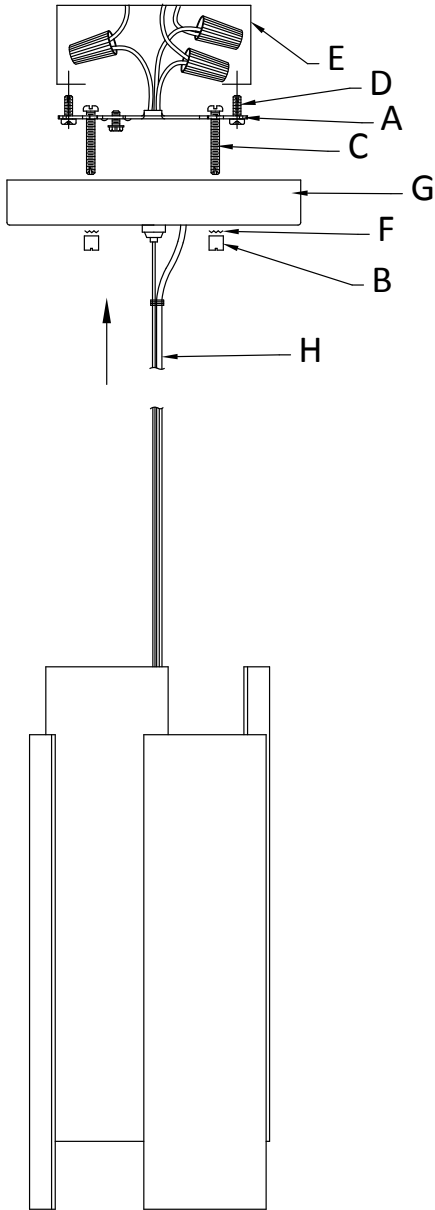

Parts List

- | | | |
|---------------------------|------------------------------------|-------------------------|
| [A] Mounting Strap | [C] Fixture Mounting Screws | [E] Outlet Box |
| [B] Lockup Knobs | [D] Mounting Strap Screws | [F] Lockwashers |
| | | [G] Canopy |
| | | [H] Center Cable |

Cautions

CAUTION – RISK OF SHOCK – Disconnect Power at the main circuit breaker panel or main fusebox before starting and during the installation.

WARNING:

This fixture is intended for installation in accordance with the National Electrical Code (NEC) and all local code specifications. If you are not familiar with code requirements, installation by a certified electrician is recommended.

Installation Instructions

- 1) Thread the two fixture mounting screws**[C]** provided into the mounting strap**[A]** as shown.
- 2) Attach mounting strap**[A]** to outlet box**[E]** with the mounting strap screws**[D]** provided.

FCC Information:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:


- 1) This device may not cause harmful interference, and
- 2) This device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However,

Installation Instructions (continued)

- 3) Grounding instructions: (See Illus. a or b).
 - a) On fixtures where mounting strap is provided with a hole and two raised dimples, wrap ground wire from outlet box around green ground screw, and thread into hole.
 - b) On fixtures where a cupped washer is provided, attach ground wire from outlet box under cupped washer and green ground screw, then thread into mounting strap.


If fixture is provided with ground wire. Connect fixture ground wire to outlet box ground wire with wire connector (Not provided) after following the above steps. Never connect ground wire to black or white power supply wires.

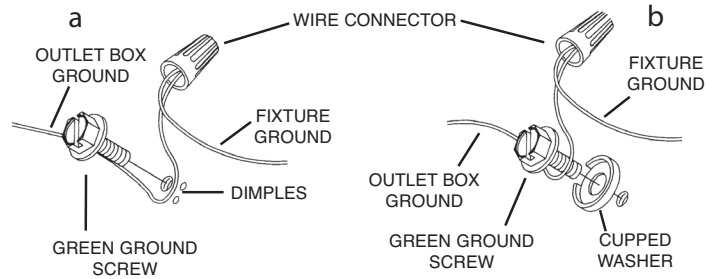

- 4) Make wire connections. Reference chart below for correct connections and wire accordingly.

Connect Black or Red Supply Wire to:	Connect White Supply Wire to:
Black	White
*Parallel cord (round & smooth)	*Parallel cord (square & ridged)
Clear, Brown, Gold or Black without Tracer	Clear, Brown, Gold or Black with Tracer
Insulated wire (other than green) with copper conductor	Insulated wire (other than green) with silver conductor

*Note: When parallel wire (SPT 1 & SPT 2) are used. The neutral wire is square shaped or ridged and the other wire will be round in shape or smooth (See illus.)

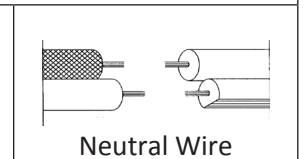

- 5) The height of the fixture can be modified by pushing the center cable**[H]** up into the canopy**[G]**.
- 6) Carefully push wire connections back into outlet box making sure all connections remain secure.
- 7) Push fixture to ceiling carefully passing the two fixture mounting screws through holes in the fixture.
- 8) Tighten and secure fixture to ceiling with the provided lock washers**[F]** and lockup knobs**[B]**.

there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.